OPERATION AND MAINTENANCE MANUAL FOR MODEL 100P ANALYZER

gasanalyzers.com

California Analytical
Instruments, Inc.

Table of Contents

	MANL	JAL FOR MODEL 100P ANALYZER	. 1
	1.1.	Overview	.4
	1.2.	Unpacking Instructions	.4
	1.3.	Reporting Damage	.4
	1.4.	Contact Information	.4
	1.5.	Warranty Certificate	.5
2.	FEA	TURES AND PRINCIPLES OF OPERATION	.6
	2.1.	Description	
	2.2.	Product Specifications Model 100P (Paramagnetic Detector)	.6
	2.3.	Principle of operation	
		TALLATION	
	3.1.	General	
	3.2.	Site and Mounting	
	3.3.	Electrical	
	3.4.	Sampling System	
	3.5.	Required Gases and Gas Handling Equipment	
	3.6.	Gas Connections	
	3.7.	Sampling Requirements	
	3.7.		
	3.7.		
	3.7.		
	3.7.	I .	
	3.7.		
4.		ERATION1	
	4.1.	Description & Function of Components	
	4.1.		
	4.1.		
	4.1.		
		Preparations for Operation	
	4.2.	3	
	4.2.		
	4.3.	Power on	
	4.4.	Zero Adjustment:	
	4.5.	Span Adjustment:	
	4.6.	Start-Up and Routine Maintenance:	
	4.7.	Cross sensitivity of gases	
	4.7.		
_	4.7.		
5.		chanical Zero Adjustment	
6.	iviec	chanical & Electrical Drawings2	4 1

Table of Figures

rigure 2-1 Magnetic Susceptibility of gases	
Figure 2-2 The Measuring cell in theory	7
Figure 2-3 Principle of operation	8
Figure 3-1 AC Power Switch, Connector, and Fuse	10
Figure 3-2 EMI Suppressor	10
Figure 4-1 Model 100P Analyzer Front Panel	14
Figure 4-2 Model 100P Analyzer Rear Panel	15
Figure 4-3 Model 100P Interior Layout – With Sample Gas Pump	16
Figure 4-4 AC Power Switch, Connector, and Fuse	17
Figure 5-1 Oxygen sensor adjustment	20
Figure 6-1 100P flow diagram	22
Figure 6-2 100P wiring diagram	23
Figure 6-3 100P Schematic	24
Figure 6-4 Paramagnetic oxygen sensor assembly	25
Figure 6-5 100 P O2 paramagnetic oxygen analyzer block diagram	26
Figure 6-6 100P O2 power supply	27
Figure 6-7 100P O ₂ negative supplies	28
Figure 6-8 100P O ₂ first stage amplifier	29
Figure 6-9 100P O ₂ inverter	30
Figure 6-10 100P O ₂ second stage amplifier	31
Figure 6-11 100P O ₂ voltage selection	32
Figure 6-12 100P O ₂ voltage to current converter	33
Figure 6-13 100P O ₂ heater control	34
Figure 6-14 100P O ₂ triangle wave generator	35
Figure 6-15 100P O ₂ temperature control	36
Figure 6-16 100P O ₂ proportional / integral control	37
Figure 6-17 100P O₂ range logic	38
Figure 6-18 100P Component locator	39
Tables	
Table 3-1 I/O Connections	11
Table 3-2 Twenty Eight (28) Conductor Cable Color Chart	11
Table 4-1 Cross Sensitivity of gases	19

INTRODUCTION

1.1. Overview

Thank you and congratulations! You have just purchased one of the most reliable gas analyzers in the world. Before using the analyzer, please familiarize yourself with its operation by reading this manual. If you have any questions, please do not hesitate to call California Analytical Instruments for assistance. We want you to be a member of our thousands of satisfied customers.

1.2. Unpacking Instructions

Open the shipping container and carefully remove the analyzer from the packing materials. Inspect the instrument for any sign of damage. Remove the retaining screws and lift off the cover panel. Visually check for loose parts or connectors that are not properly seated. If all internal components appear to be normal replace the cover and secure it with the screws previously removed.

1.3. Reporting Damage

Should there be any apparent damage either to the inside or outside of the instrument due to shipping or handling, notify the shipper immediately. The shipping container or packing materials should be retained for inspection by the shipper.

1.4. Contact Information

California Analytical Instruments, Inc. 1312 West Grove Avenue Orange, CA 92865 714 974-5560 Fax 714 921-2531

Website: www.gasanalyzers.com

1.5. Warranty Certificate

Subject to the exceptions and upon the conditions stated below, California Analytical Instruments (CAI) warrants that the products sold under this sales order shall be free from defects in workmanship and materials for one year after delivery of the product to the original Buyer by CAI and if any such product should prove to be defective within such one year period, CAI agrees, at its option, either (i) to correct by repair or, at CAI's election, by replacement with equivalent product any such defective product, provided that investigation and factory inspection discloses that such defect developed under normal and proper uses, or (ii) to refund the purchase price. The exceptions and conditions mentioned above are as follows:

- a) components or accessories manufactured by CAI that by their nature are not intended to or will not function for one year are warranted only to give reasonable service for a reasonable time. What constitutes reasonable time and reasonable services shall be determined solely by CAI. A complete list of such components and accessories is maintained at the factory;
- CAI makes no warranty with respect to components or accessories not manufactured by it; in the event of defect in any such component or accessory CAI will give reasonable assistance to Buyer in obtaining from the respective manufacturer whatever adjustment is authorized by the manufacturer's warranty;
- c) any product claimed to be defective must be returned to the factory transportation charges prepaid and CAI will return the repaired or replaced product freight collect;
- d) if the product claimed to be defective requires on-site repair, such warranty labor will be provided at no charge; however, transportation and living expenses will be charged to Buyer;
- e) if the product is a consumable or the like, it is warranted only to conform to the quantity and content and for the period (but not in excess of one year) stated on the label at the time of delivery or 90 days;
- f) CAI may from time to time provide a special printed warranty with respect to a certain product, and where applicable, such warranty shall be deemed incorporated herein by reference;
- g) CAI shall be released from all obligations under all warranties, either expressed or implied, if any product covered hereby is repaired or modified by persons other than its own authorized service personnel unless such repair by others is made with the written consent of CAI.

IT IS EXPRESSLY AGREED THAT THE ABOVE WARRANTY SHALL BE IN LIEU OF ALL WARRANTIES OF FITNESS AND OF THE WARRANTY OF MERCHANTABILITY AND THAT CAI SHALL HAVE NO LIABILITY FOR SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR FROM ANY CAUSE WHATSOEVER ARISING OUT OF THE MANUFACTURE USE, SALE, HANDLING, REPAIR, MAINTENANCE OR REPLACEMENT OF ANY OF THE PRODUCTS SOLD UNDER THIS SALES ORDER. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THAT THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Representations and warranties made by any person, including dealers and representatives of CAI which are inconsistent or in conflict with the terms of this warranty, shall not be binding upon CAI unless produced in writing and approved by an expressly authorized officer of CAI.

2. FEATURES AND PRINCIPLES OF OPERATION

2.1. Description

The Paramagnetic Oxygen Analyzer (PMA) is a thermostated instrument designed primarily for, but not necessarily limited to, stationary use. It is a '19" rack mount' analyzer that is also suitable for bench top use. The operation of the analyzer is based upon the principle of the magneto-dynamic oxygen cell, which is the most accurate and reliable cell for determining the oxygen content of a gas mixture from 0-100 volume percent oxygen.

Warning: This is a general-purpose analyzer, not suitable for hazardous areas. Highpressure oxygen is very dangerous. Virtually any material will burn in it, possibly explosively. It is essential that all persons using this analyzer are aware of the dangers of oxygen, and take all appropriate precautions.

2.2. Product Specifications Model 100P (Paramagnetic Detector)

SAMPLE CONTACT MATERIAL: Platinum. glass, stainless steel, viton, Teflon* and Tygon**

RANGES: Standard fixed ranges, either A or B or C

A) Range 1: 0 to 1%; Range 2: 0 to 15%; Range 3: 0 to 25%

B) Range 1: 0 to 5%; Range 2: 0 to 10%; Range 3: 0 to 25%

C) Range 1: 0 to 25%; Range 2: 0 to 40%;

Range 3: 0 to 100%

RESPONSE TIME: 90% full scale in 2 seconds

NOISE: Less than 1% full scale

LINEARITY: Better than 1% full scale

REPEATABILITY: Better than 1% full scale

ZERO SPIN DRIFT: Less than 1% full

scale in 24 hours

ZERO & SPAN ADJUSTMENT: Ten turn

potentiometer

Specifications subject to change without notice

*Teflon is a registered trademark of DuPont

DISPLAY: 3 1/2" digit panel meter

OUTPUTS: 0 to 10 VDC and 4 to 20 mA (0 $\,$

to 20 mA)

AMBIENT TEMPERATURE: 5 to 45° C SAMPLE TEMPERATURE: 0 to 50° C

SAMPLE CONDITION: Particles < 1µ, non-

corrosive dry gas

FITTINGS: 1/4" tube

SAMPLE FLOW RATE: 0.5 -2.0 LPM

Power Requirements: 115/230 (± 10%)

VAC, 50/60 Hz, 70 watts/channel

Relative Humidity: Less than 90% R.H.***

WEIGHT: 10 lbs. (4.8 kg) (Model 100F)

Dimensions: 5 1/4" H x 19" W x 15" D (133 mm H x 483 mm W x 381 mm D)

^{**}Tygon is a registered trademark of the Norton Performance Plastics Corp.

^{***}Non-condensing

2.3. Principle of operation

The paramagnetic susceptibility of oxygen is significantly greater than that of other common gases, and consequently, the molecules of oxygen are attracted much more strongly by a magnetic field than the molecules of the other gases. Most of the other gases are slightly diamagnetic, which means that their molecules are then repelled by a magnetic field.

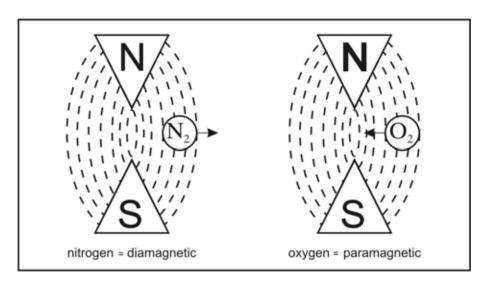


Figure 2-1 Magnetic Susceptibility of gases

The principle of the magneto dynamic cell is based upon Faraday's method of determining the magnetic susceptibility of a gas. The cell consists of two nitrogen-filled quartz spheres arranged in the form of a dumbbell. A single turn of platinum wire is placed around the dumbbell that is suspended in a symmetrical non-uniform magnetic field.

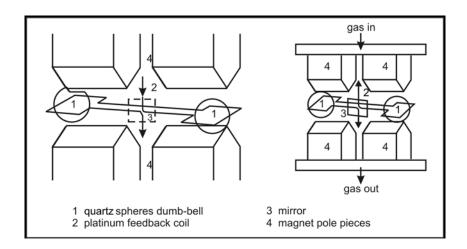


Figure 2-2 The Measuring cell in theory

When the surrounding gas contains oxygen, the dumbbell spheres are pushed out of the magnetic field by the change in the field that is caused by the relatively strong paramagnetic oxygen. The torque acting on the dumbbell is proportional to the paramagnetic properties of the surrounding gas and, therefore, it can be used as a measure of the oxygen concentration.

The distortion of the dumbbell is sensed by a light beam and projected on a mirror attached to the dumbbell whereof it is reflected to a pair of photocells. When both photocells are illuminated equally, the output will be zero. The output from the photocells is connected to an amplifier, which in turn is fed to the feedback coil of the measuring cell. If the oxygen content of the gas sample changes, the corresponding current output of the amplifier, which is proportional to the oxygen content, produces a magnetic field in the feedback coil opposing the forces and thereby causing the dumbbell to rotate.

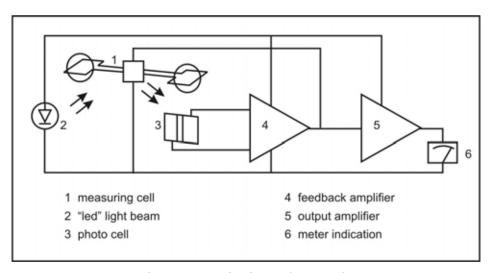


Figure 2-3 Principle of operation

Since the feedback current from the amplifier is proportional to the oxygen content of the gas sample, the output signals that are produced by the amplifier will be accurate and linear. The paramagnetic susceptibility of oxygen varies inversely as the square of the absolute temperature. To provide compensation for changes in analyzer temperature, a temperature sensitive element in contact with the measuring cell assembly is included in the feedback current circuit

_

3. INSTALLATION

3.1. General

The instrument is designed for industrial applications. These installation instructions are for a typical site. Any questions regarding specific installation situations should be directed to Technical Service of California Analytical Instruments, Inc.

Warning: This is a general-purpose analyzer, not suitable for hazardous areas. Highpressure oxygen is very dangerous. Virtually any material will burn in it, possibly explosively. It is essential that all persons using this analyzer are aware of the dangers of oxygen, and take all appropriate precautions.

3.2. Site and Mounting

NOTE: The following precautions must be carefully observed:

- 1. Select a site free from direct sunlight, radiation from a high temperature surface, or abrupt temperature variations.
- 2. This analyzer is not suitable for outdoor installation.
- 3. Select a site where the air is clean. Avoid exposing the instrument to corrosive or combustible gases.
- 4. The instrument must not be subject to severe vibration. If severe vibration is present, use isolation mounts.
- 5. The instrument is designed for rack mounting. Optional rack mount slides are available.
- 6. Do not install near equipment emitting electromagnetic interference (EMI).

NOTE: A rear supporting brace or equivalent is required if the optional rack mount slides were not purchased.

3.3. Electrical

All wiring is connected at the rear of the instrument. The Connect outputs, etc. are shown in Table 3-1 on the following page. The AC power is connected to the power/fuse/switch as shown below in Figure 3-1.

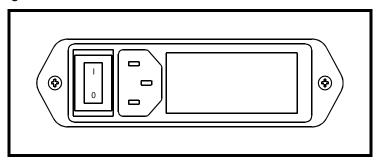


Figure 3-1 AC Power Switch, Connector, and Fuse.

NOTES: A defective ground may affect the operation of the instrument. The output voltages are connected per Table 3-1. Shielded wiring is recommended for output signals.

CAUTION: Electromagnetic interference (EMI) may affect the operation of the instrument. Do not install the instrument near electrical noise (such as high frequency furnaces, electric welding machines, etc.). If the instrument must be installed at such locations, a separate power line must be used. Noise from a relay or solenoid valve should be controlled by the use of an EMI suppressor (RC circuit) across the power wiring close to the noise-generating component (see Figure 3-2).

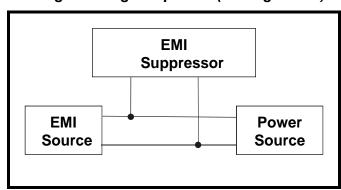


Figure 3-2 EMI Suppressor.

NOTE: The EMI Suppressor must be located close to the noise source.

Table 3-1 I/O Connections

Model 100P

Pin#	Outputs (Voltage or Current)	Channel
1	Positive (0-10 VDC)	
2	Negative (0-10 VDC)	
3	Positive (4-20 mA)	
4	Negative (4-20 mA)	
5	Not used	
6	Not used	
7	Not used	
8	Range 2	
9	Range 3	
10	Ground (Remote control)	
11	Positive 15 Volts (Remote control)	
12	Ground	
	Note 13-28 not used	

Table 3-2 Twenty Eight (28) Conductor Cable Color Chart

Pin Number	Wire Color	Wire Color Abbreviation
1	DARK BROWN	DK BR
2	RED	RD
3	ORANGE	OR
4	YELLOW	YL
5	GREEN	GR
6	LIGHT BLUE	LT BL
7	VIOLET	VI
8	GRAY	GY
9	WHITE	WH
10	BLACK	BK
11	LIGHT BROWN	LT BR
12	PINK	PN
13	BLUE	BL
14	LIGHT GREEN	LT GR
15	WHITE/BLACK	WH/BK
16	WHITE/RED	WH/RD
17	WHITE/GREEN	WH/GN
18	WHITE/YELLOW	WHNL
19	WHITE/BLUE	WH/BL
20	WHITE/BROWN	WH/BR
21	WHITE/ORANGE	WH/OR
22	WHITE/GRAY	WH/GR
23	WHITE/VIOLET	WH/I
24	WHITE/PINK	WH/PN
25	WHITE/LIGHT GRAY	WH/LT GY
26	BLACK/RED	BK/RD
27	BLACK/ORANGE	BK/OR
28	BLACK/BROWN	BK/BR

3.4. Sampling System

Note: High-pressure oxygen is very dangerous. Virtually any material will burn in it, possibly explosively. It is essential that any person using this analyzer is aware of the dangers of oxygen, and take all appropriate precautions.

The analyzer's sampling system consists of:

- 1. An internally mounted in line particulate filter
- 2. A sample pump and flow meter (optional)
- 3. A sample capillary that controls the sample flow rate to the sensor at 0.5 LPM.
- 4. A precision controlled relief valve.

The relief valve maintains a constant inlet pressure to the sample capillary and reduces response time by providing a bypass loop to the exhaust for excess sample.

The analyzer is designed to measure a clean dry sample gas that has been conditioned to remove moisture to prevent condensation in the analyzer. Some applications may require additional sample conditioning, dependent upon the specifications of the sample gas to be measured.

3.5. Required Gases and Gas Handling Equipment

- 1. Nitrogen (zero gas) in pressurized cylinder.
- 2. Standard span gas(es) near full-scale concentration (typically 80-95% of the analyzers measuring range) with a nitrogen balance, in a pressurized, certified cylinder.
- 3. Pressure regulators for zero and span gas cylinders.
- 4. Corrosive resistant gas tubing.
- 5. Flow meter with valve (0-2 LPM) if not supplied as an analyzer option.
- 6. Pump—if not supplied as an analyzer option.

3.6. Gas Connections

The tubing from the sampling system to the gas analyzer should be made from corrosive resistant material such as Teflon® or stainless steel. Even when the gases being sampled are non-corrosive, rubber or soft vinyl tubing should not be used since readings may be inaccurate due to gas absorption into the piping material. To obtain fast response, the tube should be as short as possible. Optimum tube internal diameter is 0.16 inch (4 mm). Instrument couplings are ¼-inch tube. A sample-gas outlet fitting is located on the rear panel (¼-inch tube). Pressure at this outlet must be kept at the atmospheric level. This gas should be vented from the instrument.

NOTE: Be sure tubing and joints are clean. Dust entering the instrument may cause it to malfunction.

3.7. Sampling Requirements

3.7.1. Filtration

Dust must be completely eliminated. Use filters as necessary. The filter must be capable of removing particles larger than one micron.

3.7.2. Condensation

Dew point of the sample gases must be lower than the ambient temperature to prevent accidental condensation within the instrument. When water vapor is present, pass the sample through a dehumidifier to reduce the dew point of the sample to less that ambient.

If the sample contains an acid mist, use an acid mist filter, cooler, or similar device to remove all traces of the mist.

NOTE: Teflon® is a registered trademark of E. I. du Pont de Nemours and Company.

3.7.3. Presence of Corrosive Gases

Useful service life of the instrument will be shortened if high concentrations of corrosive gases such as Cl₂, F₂, HCl, etc. are present in the sample gas.

3.7.4. Gas Temperature

When measuring high temperature gases, ensure that the maximum rating of the instrument (122° F (50° C), is not exceeded.

3.7.5. Flow Rate

The gas entering the instrument should flow at a rate from 0.5 to 2.0 liters/min.

4. OPERATION

4.1. Description & Function of Components

4.1.1. Model 100P Analyzer Front Panel

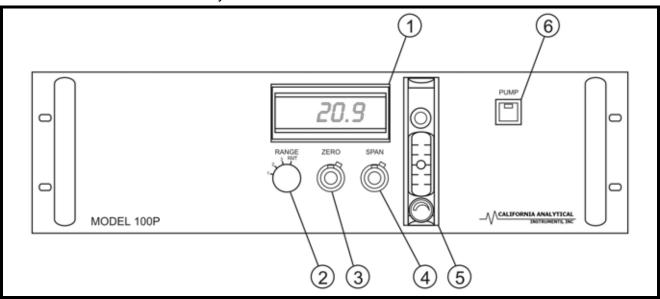


Figure 4-1 Model 100P Analyzer Front Panel

1)	Indicator Digital Display:	
	Displays output from the oxygen sensor and PCB in direct engineering units	
2)	Range Switch:	
	Used for measuring range selection	
3)	Zero Control:	
	Used for adjusting the zero level of the instrument while flowing zero gas	
4)	Span Control:	
	Used for adjusting span of the instrument while flowing span gas	
5)	Flow meter:	
	(Optional)	
6)	Pump Switch:	
	(Optional)	

4.1.2. Model 100P Analyzer Rear Panel

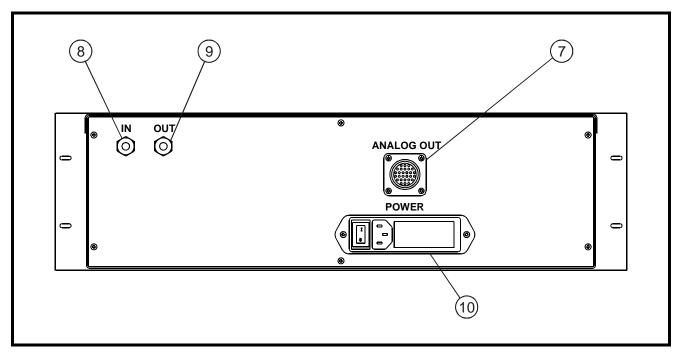


Figure 4-2 Model 100P Analyzer Rear Panel

7)	Analog Output Connector:	
	Control and Output Data	
8)	Sample Gas Inlet:	
	For introducing sample gas into the oxygen analyzer. (¼" tube)	
9)	Sample Gas Outlet:	
	For exhausting sample gas. (¼" tube)	
10)	Power Connector, On/Off Switch, Fuse	

Front Panel zero and span controls are provided for adjusting the output as necessary when flowing zero and span gases.

A four-position range switch that selects the desired measuring range is also mounted on the front panel. Range one is the most sensitive range, while range three is the least sensitive. The fourth position is labeled RMT and stands for remote. This position is used whenever the analyzer measuring range is to be controlled by an external device. When remote is selected and no external signal is provided, the analyzer defaults to range three.

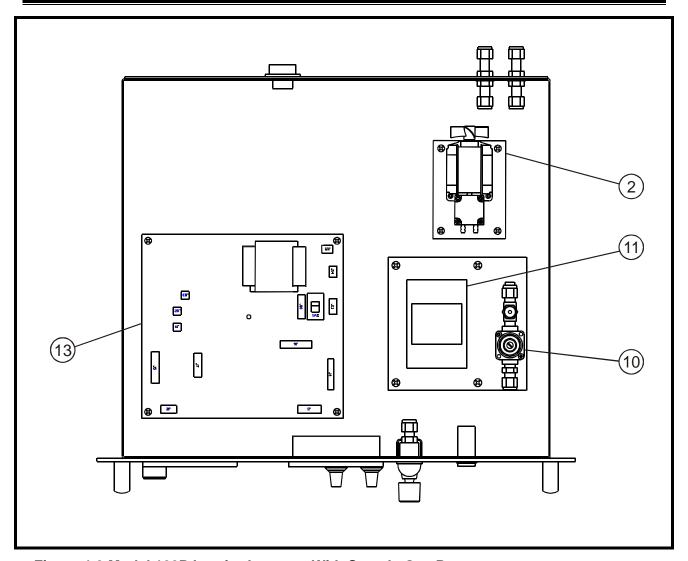


Figure 4-3 Model 100P Interior Layout – With Sample Gas Pump

4.1.3. Interior Layout Component Identification

2)	Sample Pump:
	(Optional)
10)	Relief Valve.
11)	Paramagnetic Oxygen Sensor.
13)	Circuit Board for Paramagnetic O ₂

4.2. Preparations for Operation

Warning: This is a general-purpose analyzer, not suitable for hazardous areas. High-pressure oxygen is very dangerous. Virtually any material will burn in it, possibly explosively. It is essential that all persons using this analyzer are aware of the dangers of oxygen, and take all appropriate precautions.

4.2.1. External Wiring

Make sure that the external wires have been connected as described in Section 3 installation.

4.2.2. External Piping

Review Section 3, 3-4 through 3-7.

4.3. Power on

Turn on the power switch on the rear panel. The digital panel meters should illuminate. Allow the instrument to warm up for approximately one hour. It is preferable, but not essential, to have zero gas flow through the instrument during warm up.

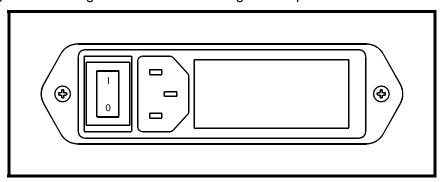


Figure 4-4 AC Power Switch, Connector, and Fuse.

NOTE: DO NOT introduce the sample gas UNTIL the analyzer has warmed-up. This will help prevent condensation from forming in the sample cell.

4.4. Zero Adjustment:

After the one-hour warm up period, flow zero gas (see Section 3.5 Gases) through the instrument at a rate of about 1 liter/min. Adjust the zero control on the front panel until the digital meter (or analog output) is exactly at zero. To achieve final stability, the analyzer may require some additional warm-up period of up to four hours (depending on variables in the analyzer's environment).

4.5. Span Adjustment:

Flow span gas through the instrument at about 1 liter/min. Adjust the span controls on the front panel until the digital meter or analog output is reading the value corresponding to the span gas concentrations.

Note: Span gas concentration should not be less than 80% of the range to be spanned.

Note: On the 0-25% range of the analyzer ambient air may be used as span gas. While flowing ambient air to the analyzer adjust the span potentiometer to 20.9% O2.

4.6. Start-Up and Routine Maintenance:

Prepare and check the sample system. Adjust the flow of sample gas to about 1 L/min. The instrument should show a meter indication. The paramagnetic oxygen analyzer is designed for extended operation and may be left switched ON continuously.

4.7. Cross sensitivity of gases

The paramagnetic measuring principle is based on the very high magnetic susceptibility of oxygen. In comparison to oxygen, other gases have such a minor susceptibility that most of them are insignificant. Exceptions to this are the nitrogen oxides. However, as these gases are in most cases present in a very low concentration, the error is still negligible.

4.7.1. Example 1

The residual oxygen percentage is measured in a closed carbon dioxide (CO_2) atmosphere. The "zero calibration" is done by means of nitrogen (N_2) .

According to the list of cross-sensitivities, the error for 100 % CO_2 at 20° C is 0.27%. In order to obtain a higher accuracy, this means that for the zero calibration the reading should be adjusted at +0.27% with N_2 , in order to compensate the error of CO_2 .

Since the values of cross-sensitivities are based on 100% volume of that particular gas, the error at 50% by volume CO_2 and 50% by volume N_2 is 0.135%.

4.7.2. Example 2

Given the following gas composition at a temperature of 20°C:

5% volume Oxygen (O ₂)	$+100.00 \times 10^{-2} \times 5 =$	+5.0000
40% volume Carbon Dioxide(CO ₂)	$-0.27 \times 10^{-2} \times 40 =$	-0.1080
1% volume Ethane(C21-14)	$-0.43 \times 10^{-2} \times 1 =$	-0.0043
54% volume Nitrogen (N2)	$0.00 \times 10^{-2} \times 54 =$	0.0000
Gives a reading (% by volume) of:		+4.8877

As this example shows, the total error (5.000 minus 4.8877) is 0.1123.

Note: see Table 4-1 below for cross sensitivity values of typical gases.

Table 4-1 Cross Sensitivity of gases

All values based on nitrogen 0% / oxygen 100%

Gas	Formula	20 °C	50 °C
Argon	Ar	-0.23	-0.25
Acetylene	C ₂ H ₂	-0.26	-0.28
Acetone	C ₃ H ₆ O	-0.63	-0.69
Acetaidehyde	C ₂ H ₄ O	-0.31	-0.34
Ammonia	N ₃	-0.17	-0.19
Benzene	C ₆ H ₄	-1.24	-1.34
Bromine	Br ₂	-1.78	-1.97
Butadiene	C ₄ H ₆	-0.85	-0.93
Isobutylene	(CH ₃)2CH=CH ₂	-0.94	-1.06
n-Butane	C ₄ H ₁₀	-1.10	-1.22
Chlorine	CL ₂	-0.83	-0.91
Hydrogen Chloride	HCL	-0.63	-0.34
Nitrous Oxide			
	N ₂ O	-0.20	-0.22
Diacetylene	(CHCI) ₂	-1.09-	-1.20
Ethane	C ₂ H ₄	-0.43	-0.47
Ethylene Oxide	C ₂ H ₄ O ₂	-0.54	-0.60
Ethylene	C ₂ H ₄	-0.20	-0.22
Ethylene Glycol	CH ₂ OHCH ₂ OH	-0.78	-0.88
Ethylbenzene	C ₈ H ₁₀	-1.89	-2.08
Hydrogen Fluoride	HF	+0.12	+0.14
Furan	C ₄ H ₄ 0	-0.90	-0.99
Helium	He	+0.29	+0.32
n-Hexane	C ₆ H ₁₄	-1.78	-1.97
Krypton	Kr	-0.49	-0.54
Carbon Monoxide	CO	-0.06	-0.07
Carbon Dioxide	CO ₂	-0.27	-0.29
Methane	CH ₄	-0.16	-0.17
Methanol	CH₄O	-0.27	-0.31
Methylene Chloride	CH ₂ Cl ₂	-1.00	-1.10
Neon	Ne	+0.16	+0.17
n-Octane	C ₈ H ₁₈	-2.45	-2.70
Phenol	C ₆ H ₆ O	-1.40	-1.54
Propane	C ₃ H ₈	-0.77	-0.85
Propylene	C ₃ H ₆	-0.57	-0.62
Propene	CH ₃ CH=CH ₁₂	-0.58	-0.64
Propylene Oxide	C ₃ H ₆ O	-0.90	-1.00
Propylene Chloride	C ₃ H ₇ Cl	-1.42	-1.44
Silane	SiH ₄	-0.24	-0.27
Styrene	C ₇ H ₆ =CH ₂	-1.63	-1.80
Nitrogen	N ₂	-0.00	-0.00
Nitrogen Monoxide	NO	+42.70	+43.00
Nitrogen Dioxide	NO ₂	+5.00	+16.00
Oxygen	O ₂	+100.00	+100.00
Sulfur Dioxide	SO ₂	-0.18	-0.20
Sulfur Fluoride	SF ₆	-0.18	-1.05
Hydrogen Sulfide	H ₂ S	-0.98	-0.43
Toluene	C ₇ H ₈	-1.57	-1.73
Trichloroethylene		-1.56	-1.72
Vinyl Chloride	C ₂ HCl ₃ C ₂ H ₃ Cl	-0.68	-1.72
			-0.74
Vinyl.Fluoride	CH₃F	-0.49	
Water	H ₂ O	-0.03	-0.03
Hydrogen	H ₂	+0.23	+0.26
Xenon	Xe	-0.95	-1.02

5. Mechanical Zero Adjustment

This adjustment may be periodically required over the life span of the analyzer, or whenever the front panel zero adjustment has reached its limit.

Note: Always check for gas leaks prior to making this adjustment, especially when the zero potentiometer is at its counter-clockwise limit.

- a) Place the front panel zero adjustment to its mid-setting (5.0 on the dial).
- b) Introduce N₂ into the analyzer at a flow rate of 0.5-2.0 LPM.
- c) Remove the screws securing the top to the chassis and lift off the cover of the analyzer.
- d) Locate and remove the rubber 'boot' that covers the O₂ sensor.
- e) Loosen the locking screw that secures the adjusting screw for positing the photo-sensor on the detector assembly. Only loosen the locking screw enough to permit the necessary adjustment (see Figure 5-1).
- f) Turn the adjusting screw to give an indication of approximately 0.00 on the digital display.
- g) Carefully tighten the locking screw and replace the rubber 'boot' removed in step d).
- h) Observe the digital display and turn the front panel zero adjustment to achieve reading of 0.00 in the display.
- i) The zero adjustment should be between 4.0 and 6.0 on its dial. If not, repeat steps d) though h) until no further adjustment is required.

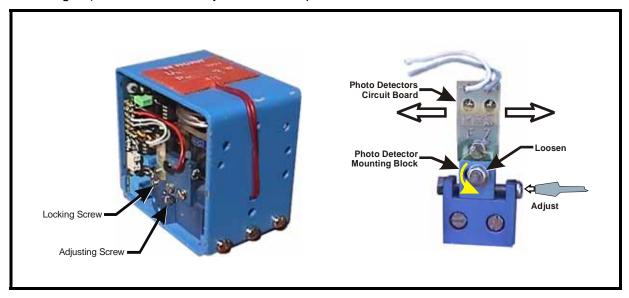


Figure 5-1 Oxygen sensor adjustment

6. Mechanical & Electrical Drawings

Figure 6 1 100P flow diagram	22
Figure 6 2 100P wiring diagram	23
Figure 6 3 100P Schematic	24
Figure 6 4 Paramagnetic oxygen sensor assembly	25
Figure 6 5 100 P O2 paramagnetic oxygen analyzer block diagram	26
Figure 6 6 100P O2 power supply	27
Figure 6 7 100P O2 negative supplies	28
Figure 6 8 100P O2 first stage amplifier	29
Figure 6 9 100P O2 inverter	30
Figure 6 10 100P O2 second stage amplifier	31
Figure 6 11 100P O2 voltage selection	32
Figure 6 12 100P O2 voltage to current converter	33
Figure 6 13 100P O2 heater control	34
Figure 6 14 100P O2 triangle wave generator	35
Figure 6 15 100P O2 temperature control	36
Figure 6 16 100P O2 proportional/integral control	37
Figure 6 17 100P O2 range logic	38
Figure 6 18 100P Component locator	39

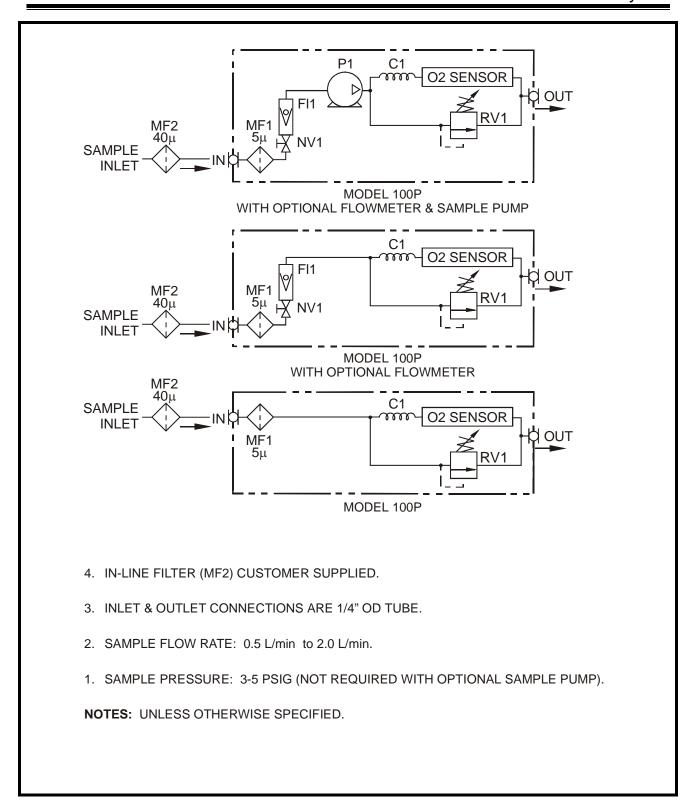


Figure 6-1 100P flow diagram

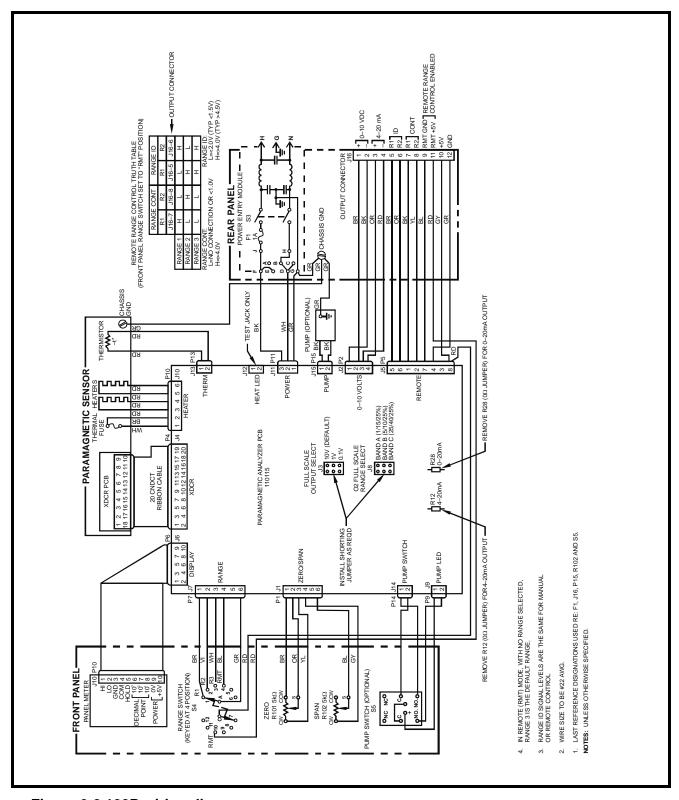


Figure 6-2 100P wiring diagram

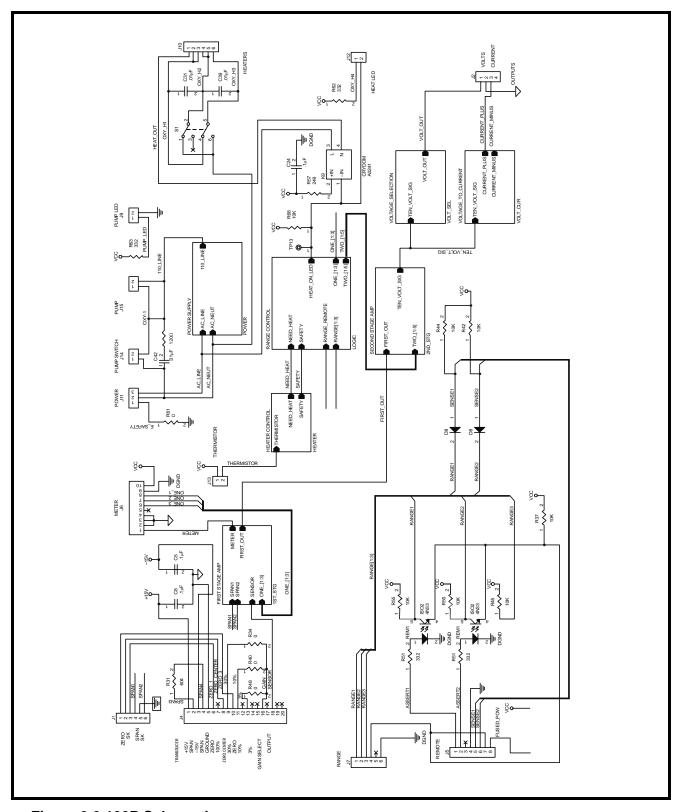


Figure 6-3 100P Schematic

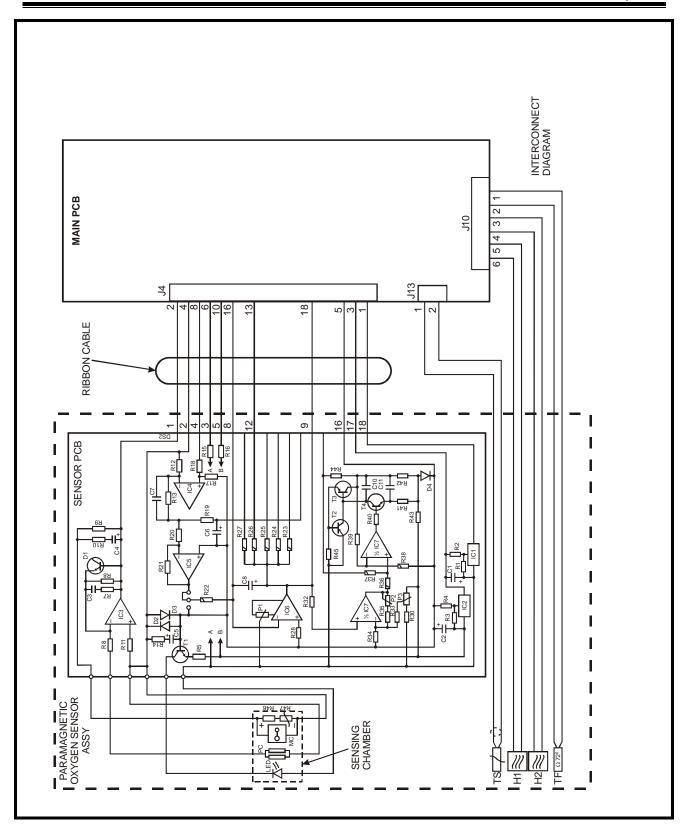


Figure 6-4 Paramagnetic oxygen sensor assembly

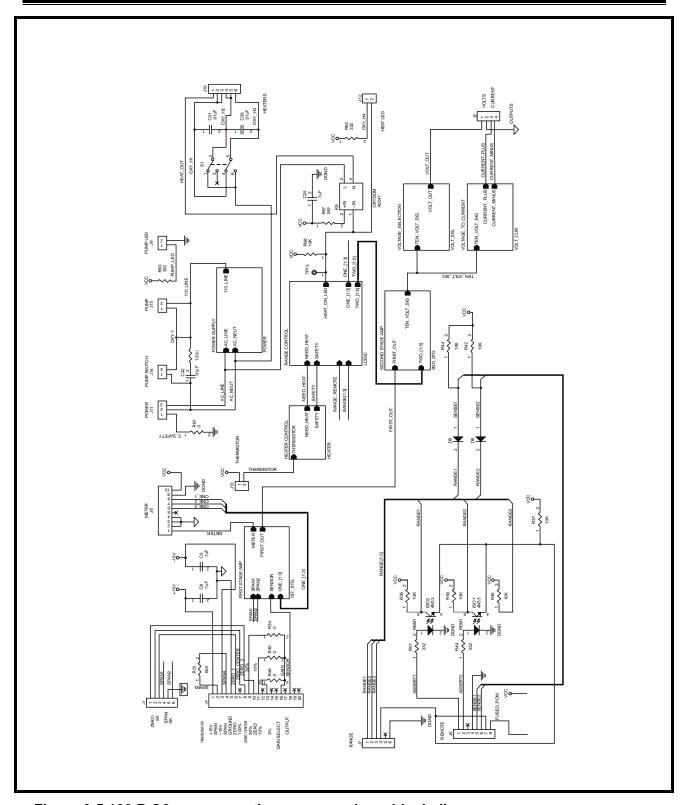


Figure 6-5 100 P O2 paramagnetic oxygen analyzer block diagram

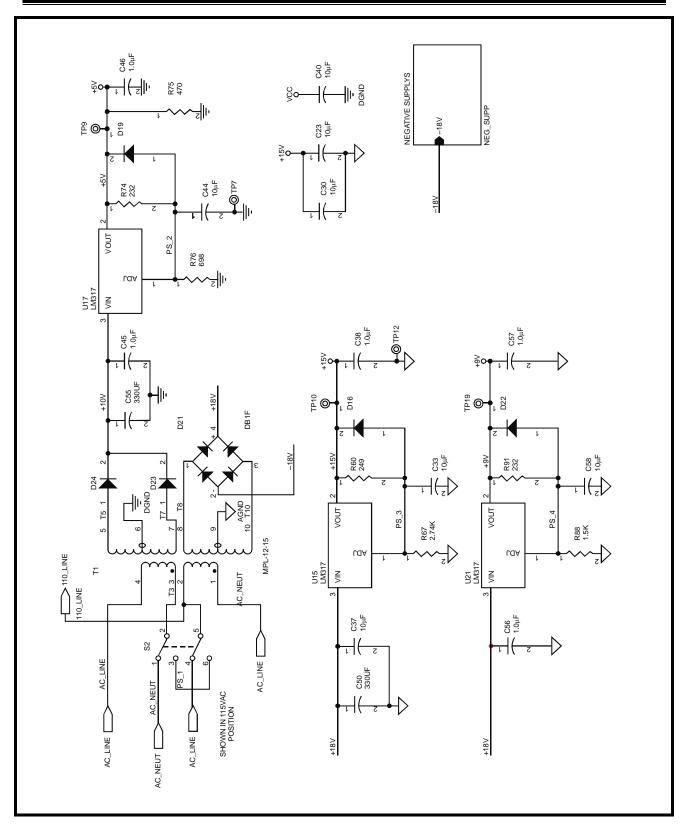


Figure 6-6 100P O2 power supply

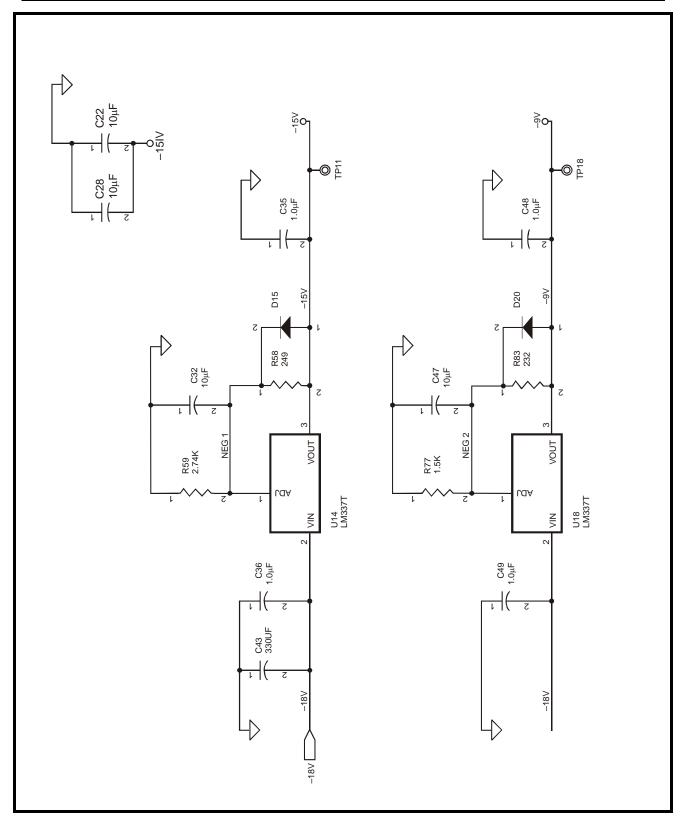


Figure 6-7 100P O₂ negative supplies

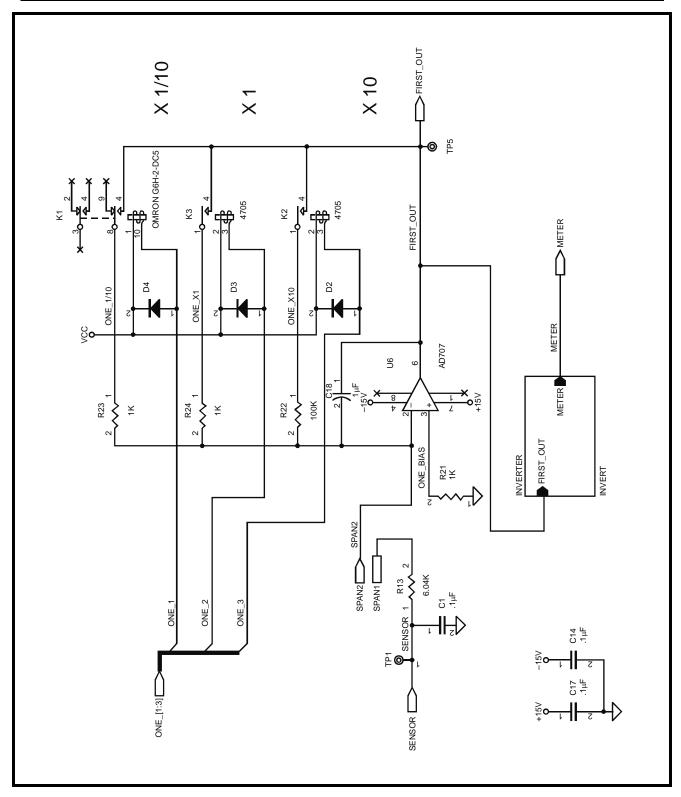


Figure 6-8 100P O₂ first stage amplifier

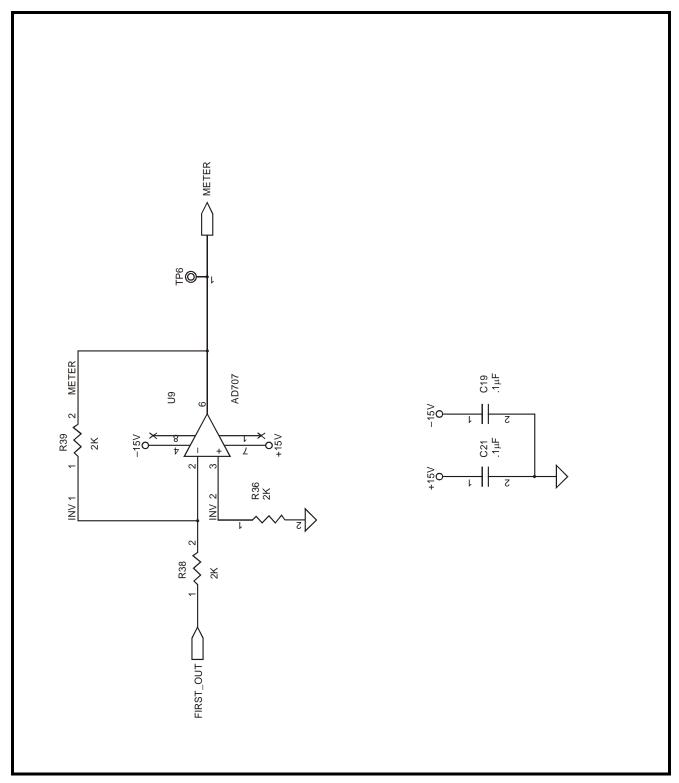


Figure 6-9 100P O₂ inverter

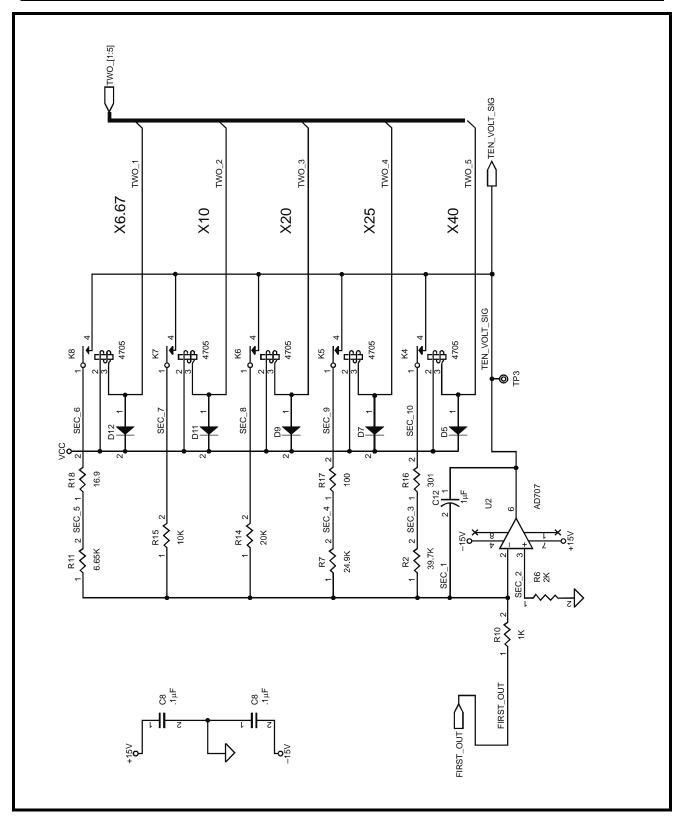


Figure 6-10 100P O₂ second stage amplifier

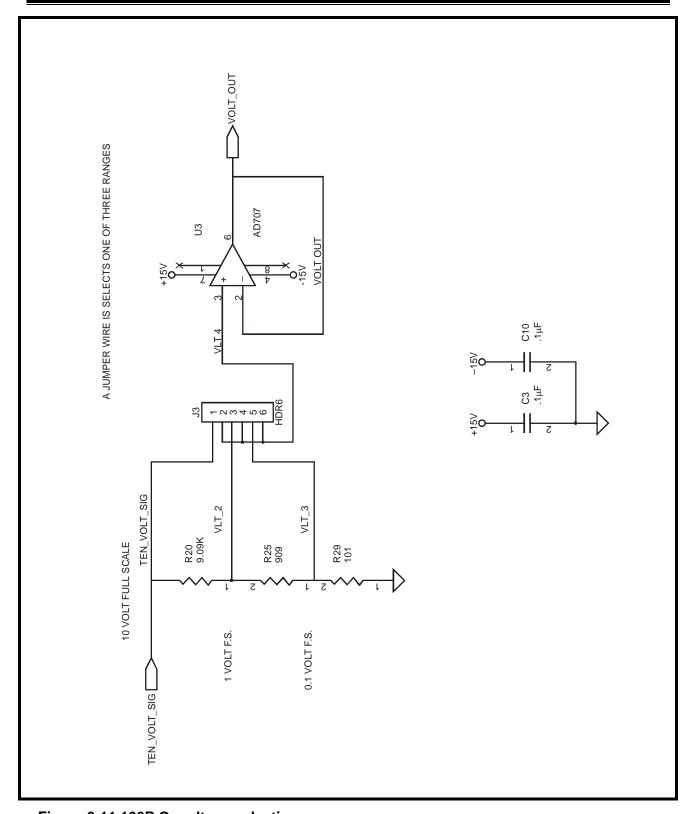


Figure 6-11 100P O_2 voltage selection

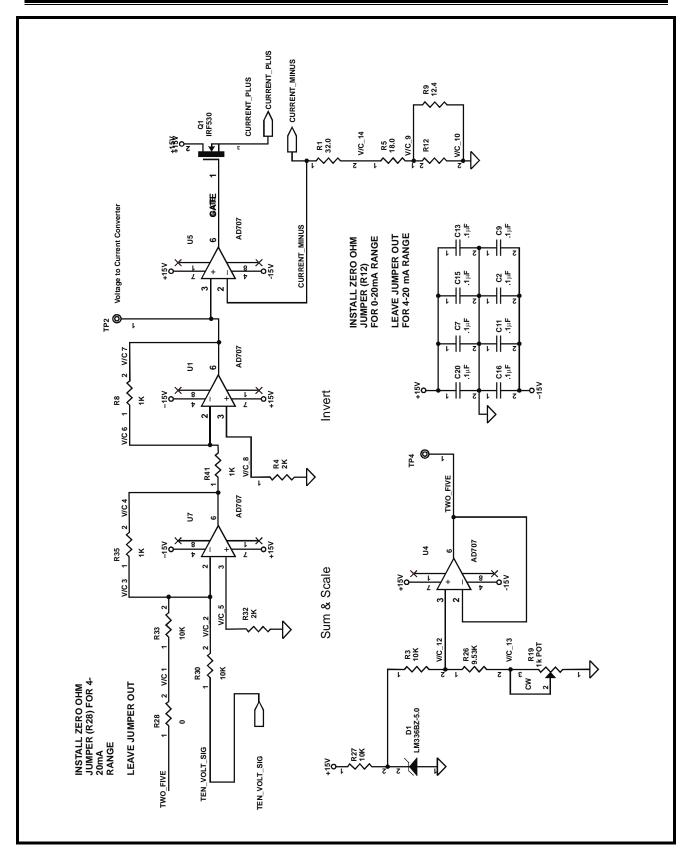


Figure 6-12 100P O₂ voltage to current converter

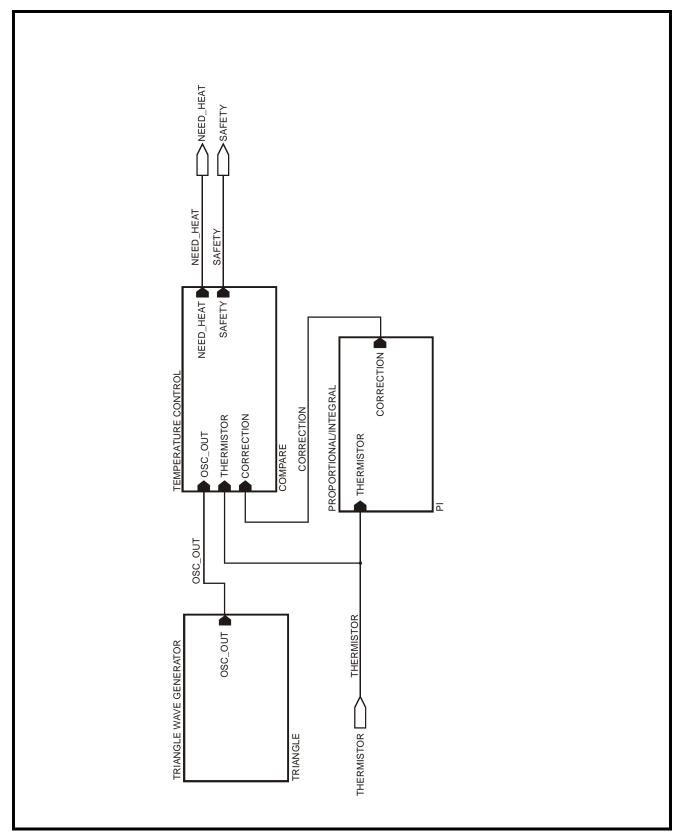


Figure 6-13 100P O₂ heater control

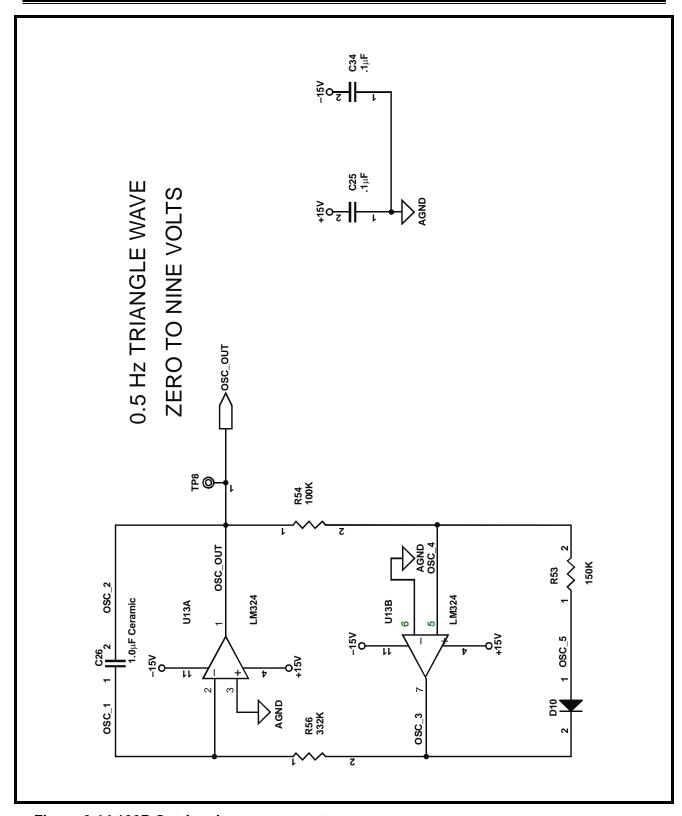


Figure 6-14 100P O₂ triangle wave generator

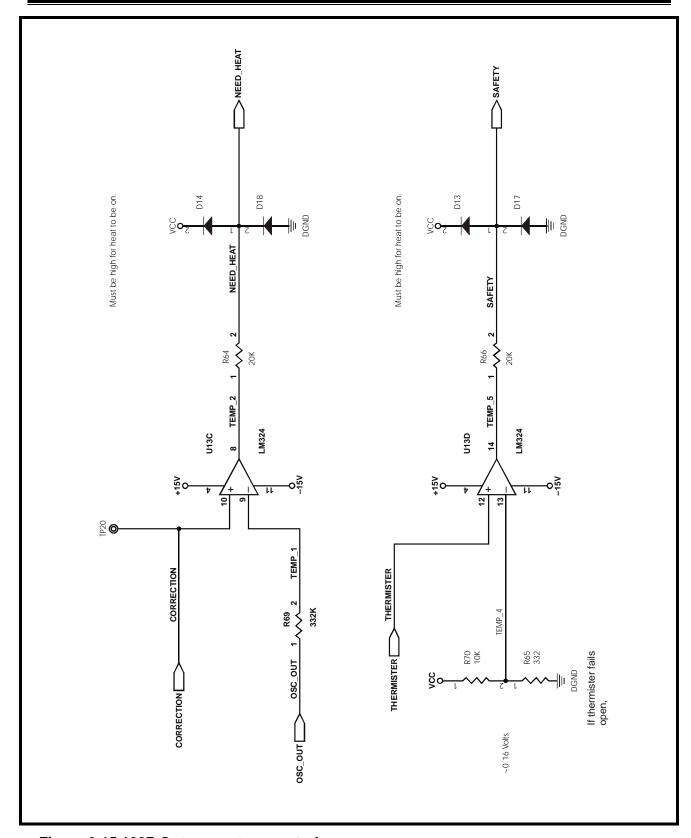


Figure 6-15 100P O₂ temperature control

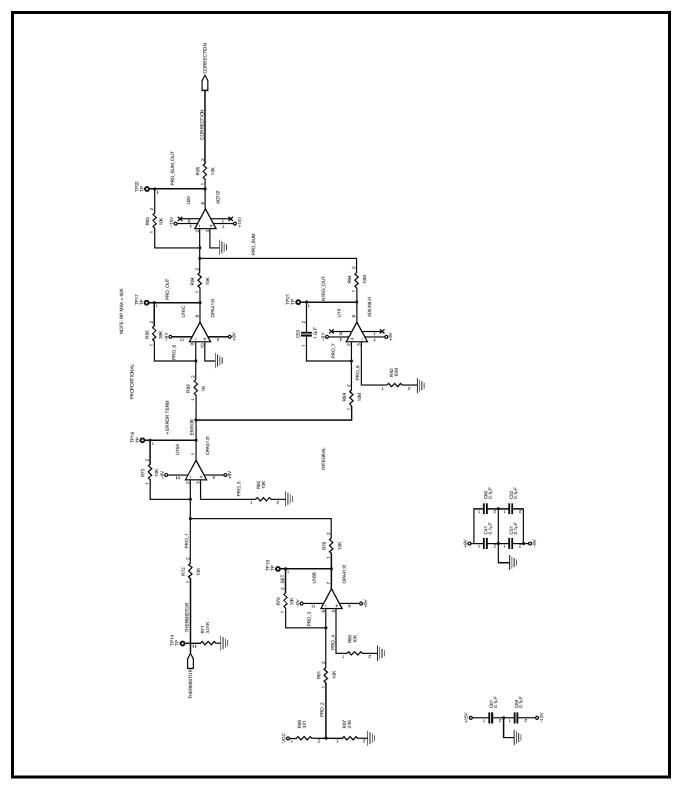


Figure 6-16 100P O_2 proportional / integral control

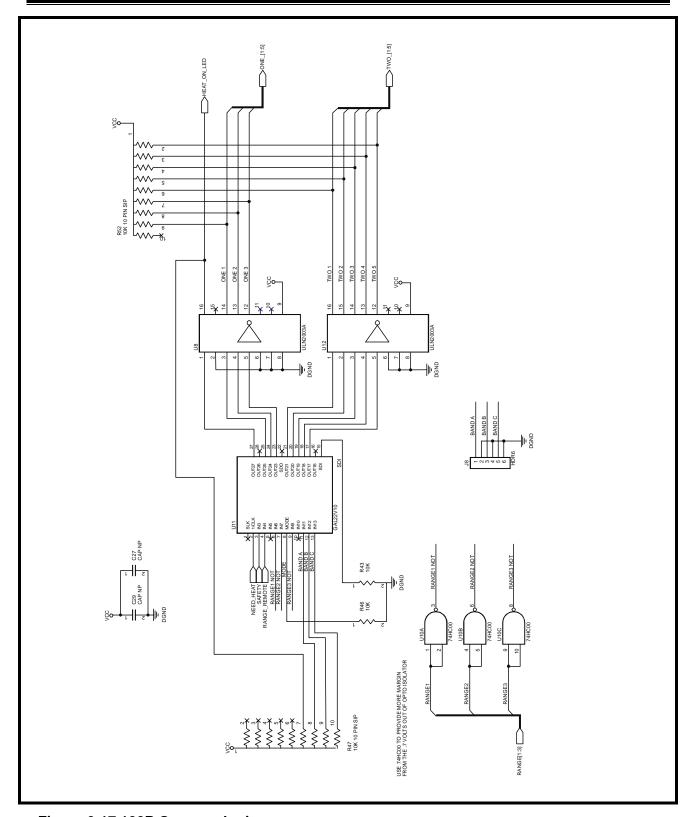


Figure 6-17 100P O₂ range logic

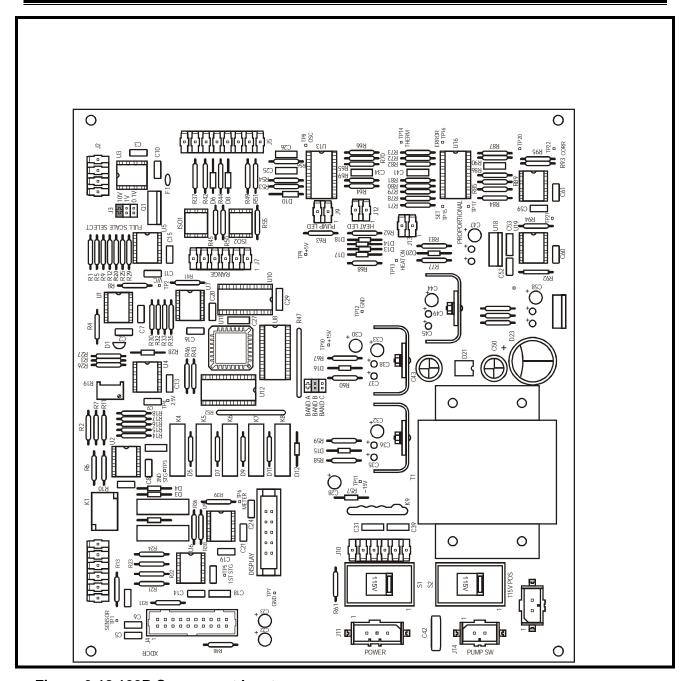


Figure 6-18 100P Component locator